

ABS light drainage pump ROBUSTA

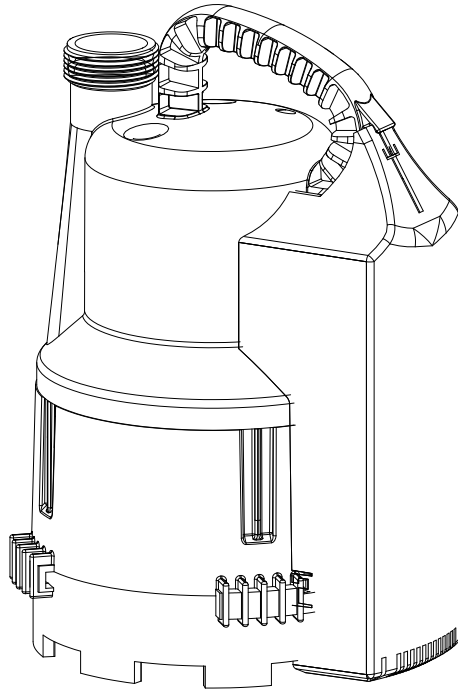

Starting and operating instructions



ABS light drainage pump ROBUSTA

100 200 300

Application

Compact submersible drainage pumps from ABS are used where large quantities of clear, rain or dirty water must be pumped quickly and reliably.

Permanent installations of pumps include basement sumps for water removal. They are suitable for pumping washing effluent, for the drainage of buildings and for pumping rainwater out of lower level rooms or underpasses.

They are used as portable pumps to fill or empty containers of every type, for use in drainage pits, to maintain dry conditions in ditches and to pump out flooded cellars.

Handling

During transport the submersible pump should not be dropped or thrown.



CAUTION! Always lift the pump by the lifting handle - never by the power cable.

Installation and Operation

The pumps are supplied ready for operation



WARNING: Pumps must be installed in accordance with governing national and local electrical codes.

For Automatic Operation

ROBUSTA WTS: Install discharge hose or pipe to pump discharge. Position the pump in the sump, switch to the automatic position by pushing the switch down. The float switch will now start the pump when the water level reaches about 6", pump shuts off at about 2". Be sure to test automatic operation after installing to make sure the pump is operating properly

For Manual Operation

ROBUSTA WTS: Install discharge hose or pipe to pump discharge, place the pump in the water to be pumped, switch to the manual "HAND" position by pushing the switch up. Switch the pump off when the water reaches approximately 2", by pushing the switch down into the automatic position or by unplugging the power cord.

NOTE *In portable applications, when a sump is pumped down below 1" of water, the pump requires approximately 30 seconds to purge air from the discharge when restarting.*

Maintenance

The pump has permanently lubricated bearings and an overload protection device to ensure maximum pump serviceability. Regular inspection and maintenance are, however, recommended in order to ensure long service life.

Always disconnect pump from electrical source before performing any type of maintenance. The pump should be cleaned from time to time (depending on degree of dirt present) and the inlet screen should be cleaned and rinsed in clean water:-

ROBUSTA 100/200 WTS only: The volute/screen can be removed by turning it clockwise. Then the impeller area may also be cleaned. (Due care should be taken not to dislodge the motor). (Please ensure O-Ring is in correct position when re-fitting Volute/Screen.)

ROBUSTA 300 WTS only: The screen can be removed by turning it clockwise. The lower volute should then be removed and both cleaned and rinsed in clean water. Then the impeller area may also be cleaned.

Never open the motor section of the pump, as dismantling could damage the seals. (Please ensure O-Ring is in correct position when re-fitting Volute and Screen.)



WARNING: Risk of electrical shock, this pump is supplied with a grounding conductor and grounding-type attachment plug. To reduce the risk of electrical shock, be certain that it is connected only to a properly grounded, grounding receptacle, motor is thermally protected. To reduce risk of electrical shock, pull plug before servicing this pump.
This pump has not been investigated for use in swimming pool areas.

Warranty


ABS Pumps Inc. warrants the ROBUSTA pump to be free from defects in workmanship and material for a period of twelve (12) months from date of sale to end customer. Pumps used in transportable (i.e. contractor / dewatering) applications carry a six (6) month warranty from the date of sale to end customer. This warranty does not cover the pumping of chemically or abrasively polluted water. ABS Pumps Inc. shall not be liable for any special, indirect or consequential damages of any kind. Defective equipment will be repaired or replaced. Returns must have prior written authorization from the company and be shipped prepaid.

NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WILL APPLY.


Technical Data

Model	ROBUSTA 100 WTS	ROBUSTA 200 WTS	ROBUSTA 300 WTS
Current	Single Phase	Single Phase	Single Phase
HP	1/4	1/3	1/2
RPM	3450	3450	3450
Voltage	115	115	115
Amps	See nameplate	See nameplate	See nameplate
Discharge	1 1/4" / 1 1/2"	1 1/4" / 1 1/2"	1 1/4" / 1 1/2"
Height	12" (308 mm)	12" (308 mm)	12.6" (320 mm)
Width	7.7" (196 mm)	7.7" (196 mm)	7.7" (196 mm)
Weight	6.6 lb (3.0 kg)	7.3 lb (3.3 kg)	8 lb (3.6 kg)
Cable	10 ft. U.L listed	10 ft. U.L listed	10 ft. U.L listed


CHECK VALVE FITTED

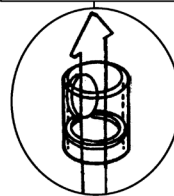


PUMP ON

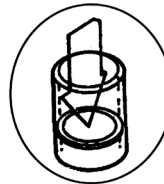

PUMP OFF

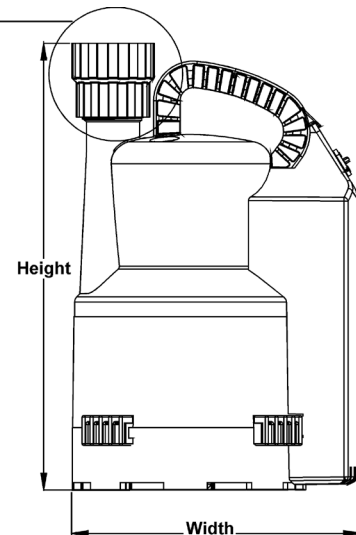

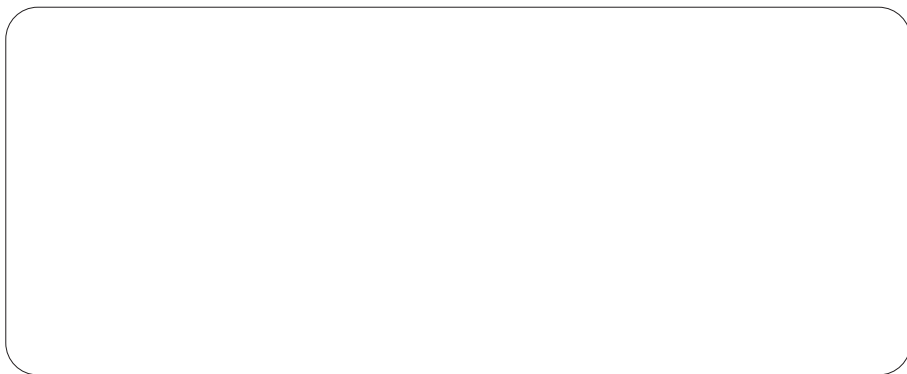

ABS Production Wexford Ltd., Clonard Road, Wexford, Ireland
Tel. +353 53 91 63 200 Fax +353 53 91 42335. www.absgroup.com